



Installation Instructions

Hand Strap and Kickstand

Surface Pro 9, 10, and 11th Edition

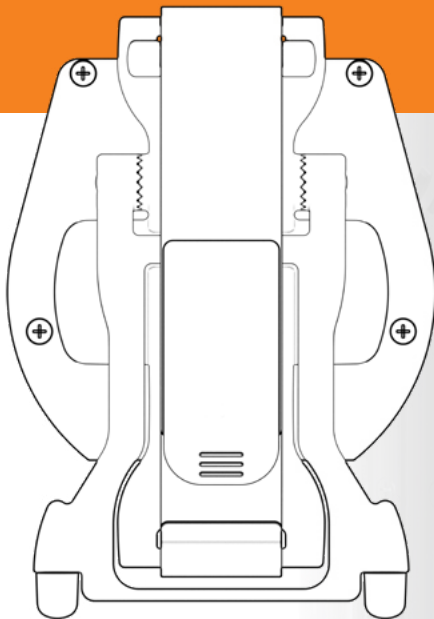

1. Center the mounting adapter on top of the snap mount plate to align the four screw holes.
2. Place the screwdriver in each mounting hole and gently press the tip to pierce the protective screw cover. With the pilot holes created, insert and tighten the four screws.

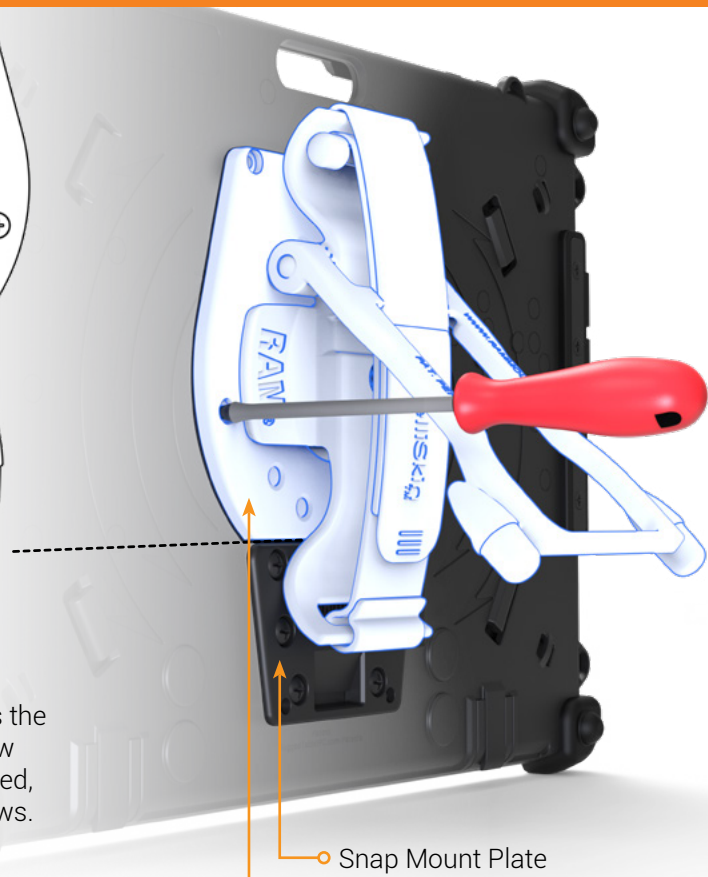

- Snap Mount Plate
- Mounting Adapter